NH Japan Holdings Limited.

Che-ez!

SPYZ Digital Camera

USER'S MANUAL

http://www.che-ez.com

Che-ez! digital camera

©2001 NH Japan Holdings Ltd. All Rights Reserved.

Introduction

Congratulations on purchasing the Che-ez! SPYZ. Using the latest innovations in technology the Che-ez! SPYZ offers fun, affordable and easy to use digital imaging.

Although you probably want to get started right away, please take a few minutes to read this guide and familiarize yourself with your new Che-ez! SPYZ. Your new Che-ez! SPYZ will take 26 Hi-Res (VGA 640 x 480 pixels) or 107 Low-Res (QVAG 320 x 240 pixels) images, which you upload to your PC (Personal Computer) running Windows® 98 , 98SE, Windows® Me and Windows® 2000 or Macintosh™ running OS 8.6 - 9 via the USB (Universal Serial Bus) port.

You can also use your Che-ez! SPYZ to capture not only snaps of your family and friends, but also video clips of them in action.

Your Che-ez! SPYZ can also be used as a Web Cam. If you have an internet connection and microphone (not supplied) you can chat face-to-face with friends and colleagues, conferencing in real time.

Please note that your images are stored on your Che-ez! SPYZ's internal memory. When you have taken your images, the Che-ez! SPYZ will wait for 30 seconds and then automatically switch to Stand-by mode, which draws a constant trickle of power from the battery. When the LCD display blinks, all stored images should must have been uploaded and saved as otherwise they will be lost.

Table of Contents

Introduction	2
Table of Contents	3
Package Contents	4
System Requirements	4
Getting to know your Che-ez! SPYZ	5
Battery Installation	6
- Connecting your Che-ez! SPYZ to your computer	6
- Mode Button	7
- Changing the Image Resolution	7
- LCD Display	7
About LCD Display	8
Power	9
Taking Still Images	10
Taking Movie Clips	11
Software Installation (PC)	12
Running the Che-ez! Manager	13
Getting to know your Che-ez! Manager	13
Uploading Images	14
Creating and Uploading Movie Clips	15
Creating Live Movie Clips	16
Software Installation (MAC)	17
Install the Che-ez! Manager	17
Uploading Images and Movie Clips	18
Troubleshooting	19
Battery Guidance	20
Technical Specifications	21
FCC Notice	22

Package Contents



Che-ez! SPYZ



USB Cable



Ball Chain with Plate

Ball Chain Necklace

User's Manual



Warranty Card / Registration Card



CD-ROM Contents
(includes Che-ez! Manager, ArcSoft™ PhotoStudio® 2000 (PC & Mac),

System Requirements

For Windows® Users

- Compatible with Microsoft® Windows® 98, 98SE, Me and Windows® 2000
- Pentium® 200Mhz or Pentium® compatible processor
- 32MB RAM or higher
- USB Port
- 200MB free disk space
- CD-ROM Drive
- Colour Monitor with High Color (16-bit) graphic capability or higher
- Standard mouse and keyboard

For Macintosh™ Users

- PowerPC® Processor
- Mac™ OS version 8.6 - 9
- USB port
- 32MB RAM
- 150MB Free disk space
- Colour Monitor with High Color (16-bit) graphic capability or higher
- CD-ROM Drive
- Standard mouse and keyboard

- Some models may not function properly due to proprietary software which could clash with the Che-ez! driver.
- Compatible only with models with built-in USB ports.
- Under the following conditions, the camera may not perform:
  - PC with USB Hub and connected with USB port extension device, DIY, and modified computers.
  - Windows95/3.1 version up-graded to Windows98, Windows95/NT version up-graded to Windows2000, Macintosh OS8.1 version up-graded to Macintosh OS8.6, OS9.0 and OS9.1.
- It can not operate in Windows95/3.1, WindowsNT
- In the Windows2000, performance guarantee only applies to Windows Professional
- We are not liable for the damage for hardware and software due to the usage of this product
- We are not liable for the claim in loss or damages of data via PC's malfunction resulting from usage of this product.
- Design and specification subject to change due to the modification of the product without prior notice.
- Windows is the registered trade mark of Microsoft.
- Macintosh is the registered trade mark of Apple Computer.
- Other system products named in this package is copyright and patent protected.

Getting to Know Your Che-ez! SPYZ

Refer to the picture below for a quick overview for your Che-ez! SPYZ.

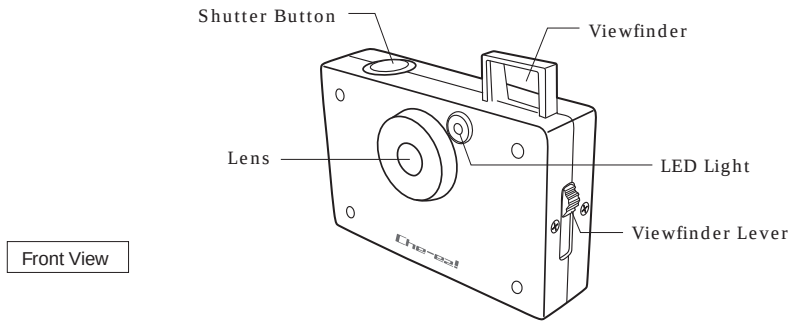

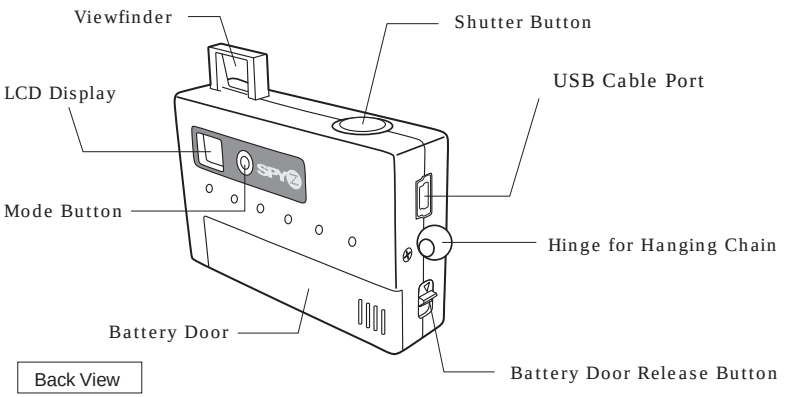

Battery Installation

IMPORTANT

Important Note:
To avoid lost images when changing batteries, please make sure your images are uploaded to your PC or Mac before changing batteries. Or make sure the Che-ez! SPYZ is connected to your PC or Mac via the USB cable with your PC or Mac switched on.

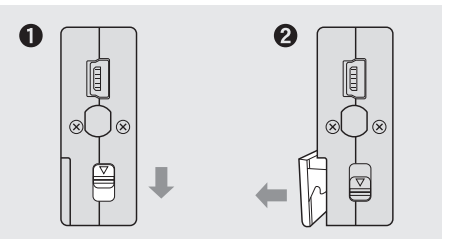

❶ Press the Battery Door Release Button to release the battery compartment.
❷ The Battery Door will automatic open, please change the battery and close the battery door.

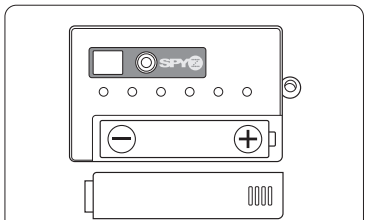

Battery Position:
Make sure you follow the correct polarity (+) (-) as indicated.

Connecting your Che-ez! SPYZ to Your Computer

The USB cable allows you to upload images from the Che-ez! SPYZ to your PC or Mac. One end of the cable connects to the USB port on the side of the Che-ez! SPYZ and the other end connects to your PC's or Mac USB port. When your Che-ez! SPYZ is connected to your PC or Mac, it will draw power from the PC in order to preserve your battery life.

* The USB port can be found on the front or back panel of your PC or Mac. Look for this symbol next to the connection port. (Also see your PC or Mac operating manual for the location of your USB connection port.)

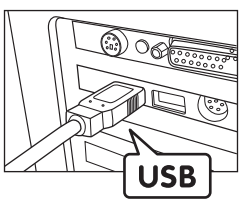

Mode Button

The Mode Button has 2 primary functions:

Turning your Che-ez! SPYZ On from the Stand-by Mode

When your Che-ez! SPYZ is in Stand-by Mode, press the Mode button to reactivate.

Cycling Through the Operating Modes

You can also use the Mode Button to cycle through the operating modes of your Che-ez! SPYZ.

Changing the Image Resolution

Image resolution can be changed whenever you need.

1. Cycle through the Mode options by pressing the Mode Button.
2. Press the Shutter Button once to change to the alternative resolution.

Changing from Hi-Res Mode to Low-Res Mode:-

Press the Shutter Button to Confirm

Changing from Low-Res Mode to Hi-Res Mode:-

Press the Shutter Button to Confirm

LCD Display

Still image mode

Che-ez! SPYZ has 2 image qualities that allow you to choose which quality you like. The LCD display has a count down function, it will show all the available images on the display that you can use.

HIGH: 26 images / LOW: 107 images

For a detailed description, please refer to P.10

Forced Standby Mode

In this mode, battery consumption can be reduced and the images can be recorded in the internal memory.

Continuous Mode / movie Clip

To create a movie clip:

1. Press the Mode Button until the

appears on the LCD.

2. Press and hold the Shutter Button within 5 seconds to start taking continuous images. When you are in Low-Res mode, the Che-ez! SPYZ will allow you to take 107 images. In Continuous Mode, the counter will rapidly decrease from 99 to 00 accompanied by a series of rapid beeps as each image is taken. If the Shutter Button is not pressed within 5 seconds the Che-ez! SPYZ will revert to the normal image taking mode.

HIGH Res: about 8 seconds / LOW Res: about 28 seconds

Self-Timer Mode

To use the self-timer feature, press the Mode Button until

appears in the LCD then press the Shutter Button to start a 9 second self-timer. The Che-ez! SPYZ will issue a short beep every second and then a long beep just prior to a further short beep which indicates that the image has been successfully taken.

⚠ATTENTION: When your Che-ez! SPYZ's internal memory is full, LCD display will be

. You can set the mode but cannot take any photos as the memory is full.

Clear Mode

When you wish to clear the memory of your Che-ez! SPYZ, press the Mode Button until

appears on the LCD. Pressing the Shutter Button once will cause the Che-ez! SPYZ to beep and the

start flashing. Pressing the Shutter Button again within 5 seconds will clear all the images stored and reset the image counter.

⚠ATTENTION: Individual images cannot be cleared.
All images will be lost when the memory is cleared. Please make sure you upload your wanted images before clearing your Che-ez! SPYZ's memory.

About the LCD Display

The LCD Display at the back of the camera is 2 digits English numeric display.
Please note when the camera is in LOW resolution mode, the remaining images will show the count down from 99 images.
When the camera is in LOW resolution mode, it can record up to 107m images. From 107 - 100 picture frame will not count down until there are 99 frames remaining.

About the Viewfinder Indication

The Viewfinder is for image position. The optimum positioning place the camera about 30cm from your eye.
As there are differences in individuals eyesights, it is recommended to practice taking picture in order to be accustomed to the unique characteristic. before you start to use your Che-ez! SPYZ.

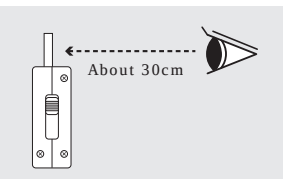

Power

Stand-by Mode

After a period of 30 seconds inactivity, the Che-ez! SPYZ will switch to Stand-by Mode automatically and the LCD will go blank. All images taken will not be lost as they are stored in the Che-ez! SPYZ's memory.

Important Notes:
It is important to note that any images stored in your Che-ez! SPYZ's memory will be lost if the battery is totally drained or removed (and the USB cable is not connected to your Che-ez! SPYZ to your powered on PC or Mac). Please make sure your wanted images are uploaded to your PC or Mac via the USB cable before changing or installing new battery.

Low Battery

If the LCD display begins to blink or is displayed, these are warnings that there is not enough power left in your battery to fully operate your Che-ez! SPYZ.

Important Notes:
You must upload any stored images within 6 hours. Do not replace your battery before you have downloaded or saved your images to your PC or Mac.

Taking a Still Image

1. Please start by pressing the MODE button to select the Picture Quality. (HIGH/LOW)
* Che-ez! SPYZ's default setting is in High Resolution mode.

2. Confirm the image from the Viewfinder indicator.

3. Press the Shutter button and the LCD display count down the remaining images until "00" is displayed.

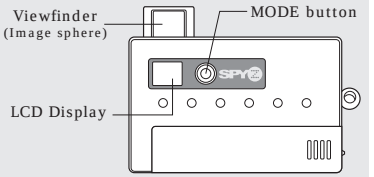

⚠ ATTENTION: Please refer to page 9 for using Viewfinder indicator.

◎ Normal picture taking, when you press the Shutter button. LCD will count down on every picture recorded. no more picture can be taken when the display is showing

◎ A green LED light and high pitch beep sound will be heard when a picture is taken successfully. If there is insufficient light, a red LED light and dull beep will sound and no picture will be capture.

◎ This camera does not have a Flash Strobe, so please make sure the environment is bright enough for you to take a picture.

Change the picture quality

Before you taken pictures, please press the MODE button to select the picture quality. (HIGH/LOW)

Picture Quality	Display	Image Size	No. of Images
HIGH		640 x 480pixel (VGA)	26 images
LOW		320 x 240pixel (QVGA)	107 images

⚠ ATTENTION:
From 107 images - 100 images, the LCD display will only show at

Tips for taking picture

◎ For taking picture of a person, please test by taking the upper body.
If you take a picture with of body, some areas (i.e. face or the side part of the picture may not be so clear.)
◎ When you take a picture, please ensure the environment has enough brightness. If the background is too dark, the main object image will be too bright. Please try to balance the brightness of the background and the objects when you take a picture.
◎ Target objects should be at least 50cm away from the camera.

Taking a Movie Clip

Using the Ct mode, the video clip motion picture's quality is determined by photo taking duration. When storage in P.C., you can set the frame rate (replay speed for video clip motion picture.)

Image Quality	Display	Recording time
HIGH	Hr	app. 8 sec.
LOW	Lr	app. 28 sec.

1. Start by press the MODE button and select the resolution mode. (HIGH/LOW)
*By default, the camera setting is in HIGH resolution mode.
2. Press the MODE button until the Ct appears on the LCD.
3. Press and hold the Shutter Button within 5 seconds to start taking continuous images. When you take images, the LCD display will start to count down until the display to show 00

⚠ATTENTION: In LOW resolution mode, Images from 107 - 100 images will display in the LCD as 99

IMPORTANT: During the Continuous Mode, the camera will allow images to be taken with insufficient light.

Software Installation

Windows® User

How to Install the Che-ez! Manager

1. Insert the CD-ROM disc into the CD-ROM drive and close the CD ROM draw.
2. An installation wizard will automatically launch.
3. Click "Che-ez! Manager" icon.
4. Follow the instructions presented on the screen to complete the installation.
5. Select the Language that you want and press "OK"
6. Click "OK" to restart your computer and wait for your PC to restart automatically.

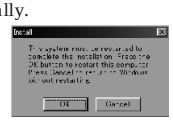

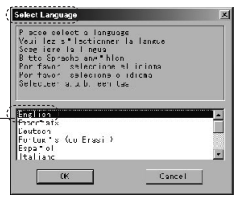

Notes:
If the setup screen doesn't appear after loading the CD, then you can manually start it by double-clicking the "My Computer" Icon on your desktop, then double-clicking the icon for the CD-ROM drive.
When the CD-ROM window opens, double-click the "Che-ez!" icon.

Running the Che-ez! Manager

Windows® User

Select the Che-ez! Manager icon from the Che-ez! Manager program group on the Windows Start Menu or double-click the Che-ez! Manager short-cut icon on the desktop.

Che-ez! Manager
short-cut icon
on desktop

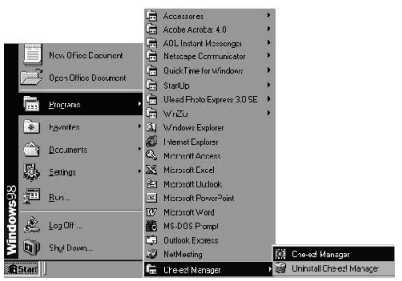

Getting to know your Che-ez! Manager.

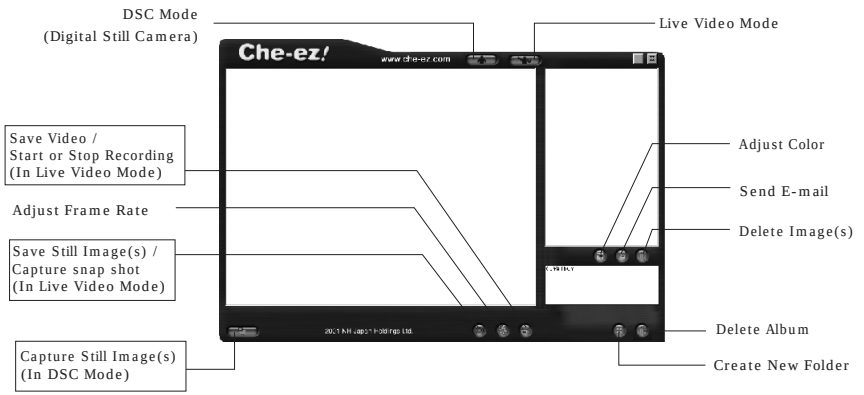

Quick Reference

DSC Mode (Digital Still Camera)	Create New Folder	Adjust Frame Rate
Live Video Mode	Save Still Image(s) / Capture snap shot (In Live Video Mode)	Send E-mail
Capture Still Image(s) (In DSC Mode)	Save Video / Start or Stop Recording (In Live Video Mode)	Delete Image(s)
Adjust Resolution (In Live Video Mode)	Adjust Color	Delete Album

Important Notes:
You can use the Che-ez! Manager to upload images captured by your Che-ez! SPYZ at any time whether or not the Che-ez! SPYZ is full. Connect your Che-ez! SPYZ to your PC via the USB cable. Plugging the USB connector into the Che-ez! SPYZ will cause it to reset and issue a double beep but all stored images will remain.

Uploading Images

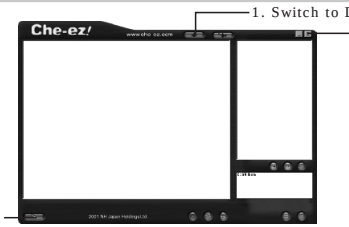

1. Switch the interface to DSC (Digital Still Camera) Mode by clicking the button.
2. Click to capture all images stored in your Che-ez! SPYZ.

3. All uploaded images will be shown on the left panel.
4. During your Che-ez! Manager installation a folder called "Album" has been automatically created in the bottom right section of the Che-ez! Manager. Highlight the file called "C:/Windows/Desktop/Album" in the bottom right hand corner. You can alternatively click to create a new album to hold your images. Name the album and save it to wherever you want in your PC.
5. If you have already created an album and you want to save image(s) in, click on the album.
6. TO SAVE ONE IMAGE
   - To save 1 particular image and put in the selected album, select the image by clicking the image once and click the Save Still Image button.
   - The selected image will appear on the right panel and it will be saved to the album you created and or highlighted.
7. TO SAVE ALL IMAGES
   - To save all images taken and put in the album, select all the images by holding the CTRL button down on keyboard with the mouse click on each image and click the button.
   - All the selected images will appear on the right panel and they will be saved to the album you created

   TO ADJUST IMAGE
8. You can adjust an image (brightness, contrast...) by highlighting the image and clicking the button.
9. To retrieve images saved in an album, simply double-click the album and the images stored in the album will be shown on the top right panel. Double click on image to view

IMPORTANT NOTE: Your images are also now retrievable from your desktop by clicking on the folder called "Album".
TIP: To quickly highlight all images hold down the CTRL and SHIFT key together and with the mouse click on the end images of every row of images. This will quickly highlight every image in every row.

Creating and Uploading Movie Clips

Create your very own digital movies using Che-ez! Manager. Low resolution supports 107 frames of video. High Resolution supports 26 frames of video.

- When the Che-ez! SPYZ is full, attach it to your PC via USB and run the Digital Camera Manager.
- You can now start to create your own movie clips by following these steps:

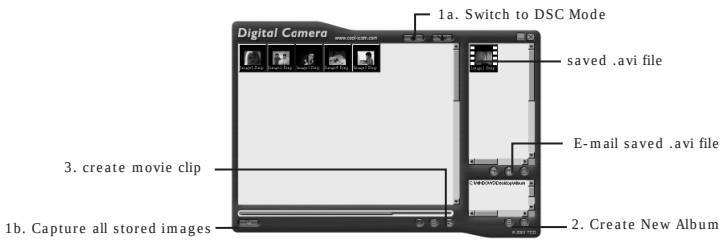
1a. Switch to DSC Mode
saved .avi file
E-mail saved .avi file
3. create movie clip
1b. Capture all stored images
2. Create New Album

1. Switch the interface to DSC (Digital Still Camera) Mode by clicking the button. Click to capture all images stored in your Che-ez! SPYZ. All uploaded images will be shown on the left panel.
2. During your Che-ez! Manager installation a folder called "Album" has been automatically created in the bottom right section of the Che-ez! Manager. Highlight the file called "C:/Windows/Desktop/Album" in the bottom right hand corner. You can alternatively click to create a new album to hold your images. Name the album and save it to wherever you want in your PC.
3. If you have already created an album and you want to save image(s) in, double click the album.
4. Click the button to create a movie clip (.avi file) with all the selected images by holding the CTRL key on your keyboard with the mouse click on each image.
5. Select the video compression format. "Full Frames (Uncompressed)" format is recommended.
6. The movie clip created will appear on the right panel and it will be saved to the album you created and highlighted.
7. To retrieve movie clips saved in an album, simply double-click the album and the movie clips stored in the album will be shown on the top right panel.

IMPORTANT NOTES: Your images are also retrievable from your desktop by clicking on the folder called "Album".

TIP: To quickly highlight all images hold down the CTRL and SHIFT key together and with the mouse click on the end images of every row of images. This will quickly highlight every image in every row.

Creating Live Movie Clips

You can now create live digital movies using Che-ez! Manager.

- Make sure your Che-ez! SPYZ is connected to your PC via USB and run the Che-ez! Manager.
- Warning! Live Video Mode will erase all images stored in your Che-ez! SPYZ. Make sure you upload all wanted images before you switch the Che-ez! Manager to Live Video Mode.
- You can now start to create your live movie clips by following these steps:

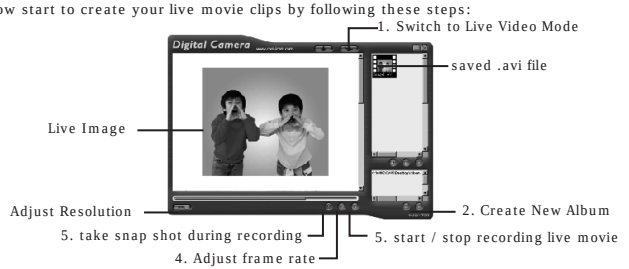
1. Switch to Live Video Mode
saved .avi file
Live Image
Adjust Resolution
2. Create New Album
5. take snap shot during recording
5. start / stop recording live movie
4. Adjust frame rate

1. Switch the interface to Live Video Mode by clicking the button.
2. During your Che-ez! Manager installation a folder called "Album" has been automatically created in the bottom right section of the Che-ez! Manager. Highlight the file called "C:/Windows/Desktop/Album" in the bottom right hand corner. You can alternatively click to create a new album to hold your images. Name the album and save it to wherever you want in your PC.
3. If you have already created an album and you want to save image(s) in, double click the album.
4. Click the button to adjust the frame rate and the button to adjust the resolution (size) of the movie clip.
5. Click to start record the live images and click again to stop recording. You can also take a snap shot during recording by clicking the button. The movie clip and snap shot created will appear on the right panel and it will be saved to the album you created.

To adjust frame rate:

You can adjust the frame rate (number of frame per second) by pressing the Frame Rate Button.

1. Click the button.
2. Enter the frame rate you want for your movie clip.

For example:-

- 80 frames at 10 frames per second = 8 sec. movie clip
- 80 frames at 5 frames per second = 16 sec. movie clip

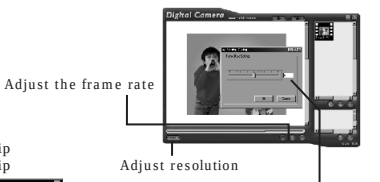
Adjust the frame rate
Adjust resolution
Enter the number of frames you want for the video clip to run at. (frames per second)

To adjust resolution:

You can adjust resolution for the movie clip by pressing the Adjust Resolution Button.

How to Install Che-ez! SPYZ Driver Macintosh™ User

How to Install Che-ez! Driver:

1. Insert the CD-ROM disc into the CD-ROM drive and close the CD ROM draw.
2. Double click the CD-ROM icon "Che-ez! SPYZ".
3. Double click the "Che-ez! Installer V1.4b3" icon.
4. Click "Continue".
5. Please disconnect all USB camera before continuing.
6. Choose a folder to install "Che-ez! Import" Plug-in file and click "Choose" to confirm. Locate the "Che-ez! Import" Plug-ins file in Hard Disk if you have not install any Photo-retouching software.

   If you already installed ArcSoftª PhotoStudio¨ 2000 and you want to use it as a default software to retrieve the images from Che-ez! SPYZ, go to "Plug-ins" folder in the "PhotoStudio¨ 2000" folder and click "Select".
7. Click "Quit" to finish the installation.
8. A folder named "Che-ez!" will appear in your Hard Disk after your Che-ez! SPYZ is connected to your Mac via the USB cable for collecting images and movies.

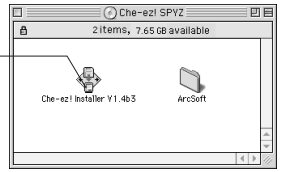

Installation was successful. Choose Quit if you are finished or Continue to perform further installations.
Continue
Quit

Uploading Images and Movie Clips Macintosh™ User

Uploading Images and Video Clips

1. Connect your Che-ez! SPYZ to your Mac via USB cable.
2. A window will pop up and ask you to name the pictures (images). File name format is default as <Date> <Time> <No. of image>. You can change the name by going to double clicking the "Che-ez!" icon in the Control Panel.

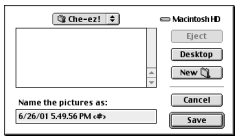

3. Click "Save"
4. Your Mac will ask you if you want to empty your Che-ez! SPYZ.
   - If you click "Yes", images stored in your Che-ez! SPYZ will be deleted.
   - If you click "No", images stored in your Che-ez! SPYZ will be retained.



5. Individual images and video clips will be uploaded to your "Che-ez!" folder.

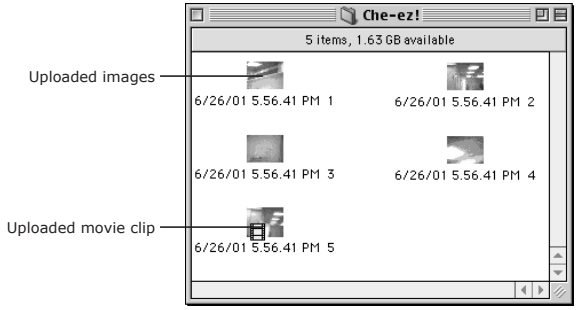

Troubleshooting

The troubleshooting guide is designed to help you. If problems continue, please contact your local customer support hot-line or visit our website http://www.che-ez.com for more details.

Symptom	Problem	Solution
Che-ez! Manager folder is not found in the Programs menu after I have installed the driver.	The installer for the Che-ez! Manager requires the Che-ez! SPYZ be connected to the PC (via the USB) after the software has been installed & the PC restarted.	Install the software, restart your PC, and finally, connect the Che-ez! SPYZ to the PC via the USB port, then the software folder will appear in the Program menu.
LCD display is flashing.	Battery power is too low to continue taking images.	Upload saved images immediately, then replace battery.
I hear a low "beep" when trying to take an image.	Insufficient light.	Take your images in better light condition.

Windows® Users:

Symptom	Problem	Solution
I receive an error message when I am installing the Che-ez! Manager.	Che-ez! Manager does not load.	Shut down all other applications and attempt to reinstall the driver, or download the updated driver from www.che-ez.com and install the updated driver.
All the images I have taken do not appear on the Che-ez! SPYZ	Insufficient battery power	Upload all images to your PC as soon as possible. (please refer to Battery Guidance section in User's Manual.)
	Removing the battery without being connected to your PC (turned on) via the USB cable.	If you need to change batteries, and retain the images in your Che-ez! SPYZ's memory, ensure you are connected to a PC which is turned on via the USB cable, which will then draw power from the PC whilst you insert fresh batteries.

Macintosh™ Users:

Symptom	Problem	Solution
I receive an error message when I am installing the Che-ez! Manager.	Che-ez! Manager does not load.	Shut down all other applications and attempt to reinstall the driver, or download the updated driver from www.che-ez.com and install the updated driver.
All the images I have taken do not appear on the Che-ez! SPYZ	Insufficient battery power	Upload all images to your PC as soon as possible. (please refer to Battery Guidance section in User's Manual.)
	Removing the battery without being connected to your PC (turned on) via the USB cable.	If you need to change batteries, and retain the images in your Che-ez! SPYZ's memory, ensure you are connected to a PC which is turned on via the USB cable, which will then draw power from the PC whilst you insert fresh batteries.

Battery Guidance

Important Note:
We strongly recommend that you DO NOT use rechargeable batteries as this will affect the performance of your Che-ez! SPYZ.

WARNINGS!
- Batteries should be replaced by an adult.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the camera before being charged (if removable).
- Rechargeable batteries are only to be charged under adult supervision (if removable).
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the camera.
- The supply terminals are not to be short-circuited.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not dispose the batteries in fire.
- Batteries are to be removed from the camera when not in use.
- Do not use rechargeable batteries.

These instructions should be retained for future reference.

Technical Specification

Imaging device:	350,000 pixels COMS Sensor
Image Resolution	High 640 x 480 pixels (VGA)
(Still Image)	Low 320 x 240 pixels (QVGA)
Image Storage	High 26 Low 107
Video Clip duration	High app. 8 sec. VGA / Low app. 28 sec. QVGA
Memory	8MB SDRAM
Storage Format	Still Image: BMP, PICT
Key features	Animation: AVI (QuickTime compatibility) Still Image Recording / Video Clip Recording / PC Camera / WEB Camera / Self Timer / Standby Mode
Lens	F=2.8, f=6.2mm
Exposure	Automatic
White balance	Automatic
Focusing range	0.5mm - infinity
PC interface	USB
Battery Life	Continuous snapshot app. 4 hours (Battery life will be varied by battery types. Usage condition & Recording mode)
Power Supply	AAA Alkaline Battery x 1 (not included)
Size (WxHxD)	60 x 38.6 x 15mm (exclude protrusive area)
Weight	App. 34g (exclude battery & keychain)

Che-ez! SPYZ should only be operated within the following environmental conditions:

- 41-104° Fahrenheit; 5-40° Celsius
- 20% - 85% relative humidity, non-condensing

⚠ Camera Cautions

- Never immerse any part of the Che-ez! SPYZ or its components into any fluid or liquid.
- Disconnect the Che-ez! SPYZ from your PC or Mac before cleaning it.
- Remove dust or stains with a soft cloth dampened with water or neutral detergent.
- Do not place hot items on the surface of the Che-ez! SPYZ.
- Do not attempt to open or disassemble the Che-ez! SPYZ. This will affect any warranty claim.

FCC Notice

This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is needed.
- Consult the dealer or an experienced radio/TV technician for help.

Shielded cable must be used with this unit to ensure compliance with the Class B FCC limits.